


Dryer

Private household / apartment building

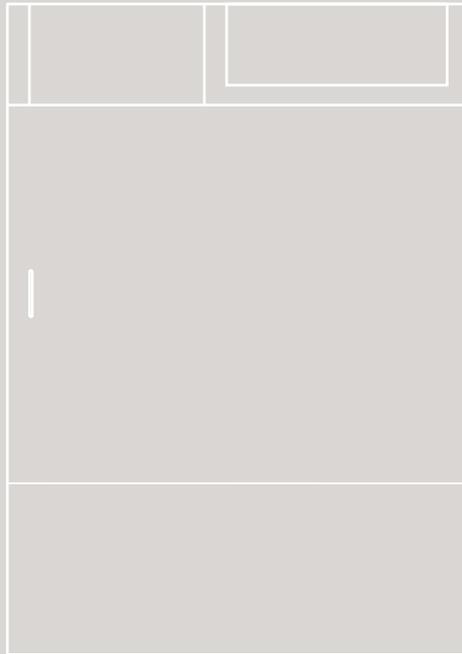

Operating instructions



Do not operate the appliance until you have read these instructions.

07/2024
Instruction number 663 522.AA

Symbols



Read the instructions.



Warnings are marked with a warning triangle. The text gives information how a dangerous situation can be avoided. Signal words indicate the severity of the danger, if not avoided.



WARNING

means that possible personal injuries, and potentially life-threatening injuries may occur.



WARNING

means that property damage may occur.



Dear Customer

We are pleased that you have chosen a Schulthess dryer.

Your new dryer is the result of many years of development work. The highest quality requirements, both in development and manufacture, guarantee a long lifetime.

Its design meets all the demands of modern laundry care and offers you a varied and individual choice of programmes.

Sparing use of energy and short drying times help to ensure that you can use your dryer as economically as possible.

Please read these instructions carefully to enable you to use all the possibilities and advantages of your new dryer. Please note in particular the safety information.

We hope you will be very happy with your new Schulthess appliance.

**Your
Schulthess Maschinen AG**

CONTENTS

SAFETY AND SAFETY MEASURES	6
DISPOSAL	9
APPLIANCE DESCRIPTION	10
Control and display panel	11
DRYING	12
Preparing appliance	12
Selecting the programme	12
Starting the programme	12
Skipping to the next programme step	12
Interrupting the programme	12
Adding laundry	13
Programme end	13
Cleaning the fluff filters	13
Cleaning the air filter	15
Appliance switch-off	15
PROGRAMME OVERVIEW	16
Most efficient programme for cotton textiles	16
SPECIAL PROGRAMMES	20
Drying in the basket	20
Pollenclean	21
Mixed laundry	22
PROGRAMME OPTIONS	23
Antibac	23
Gentle plus	23
Reverse +	23
Time preset	23
Drying +	23
Time	23
Express	24
ECO	24

SETTINGS	25
Settings menu	25
PREPAID CARD / WASHMASTER CARD	28
CLEANING AND MAINTENANCE	29
Cleaning the appliance	29
Cleaning the filter holder	29
Cleaning the moisture sensor	29
Emptying for frost protection or transport	30
Self-cleaning	30
PROBLEMS	31
CUSTOMER SERVICE	35

SAFETY AND SAFETY MEASURES



The enclosed instructions contain important information on the installation, use and safety of your dryer.

Keep them in a safe place for other users or subsequent owners.

- Read the instructions carefully before using the appliance.
- Keep the instructions close to the appliance for further reference.

This appliance meets the stringent safety regulations for electrical appliances.

- Follow the safety instructions in the operating and installation instructions.

Use in accordance with the intended purpose

This dryer is intended exclusively for drying textiles in the home.

The appliance can be used by children aged from 8 years and above and adults with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children must not play with the appliance. Cleaning and user maintenance must not be carried out by children without supervision.

Safety during operation and use

WARNING Risk of electric shock

- Do not operate an appliance with visible damage.
- Only touch the mains plug with dry hands.
- Only pull on the plug, never on the cable, as this could be damaged.
- Never spray the appliance with water and never use a steam cleaner.

Repairs may only be carried out by trained specialist personnel and defective components may only be replaced with original spare parts from the appliance manufacturer.

Incorrect repairs or third-party spare parts can cause considerable material damage and danger to the user.

Modifications to the appliance are only permitted in consultation with the manufacturer.

- If the mains connection cable is damaged, replace it with the appropriate replacement cable (available from the manufacturer or customer service).
- Always disconnect the power supply before carrying out maintenance work.
- If the appliance is not to be used for a longish period of time, it must be disconnected from the power supply.

WARNING Risk of fire! Risk of contamination! Property and appliance damage!

The appliance contains the environmentally friendly but flammable refrigerant R 290. Improper disposal can lead to fire and contamination.

- Dispose of the appliance properly and do not damage the pipes of the refrigerant circuit.

- Keep naked flames and ignition sources away from the appliance.
- Always keep the air inlet on the dryer clear.

 **WARNING Risk of injury!**

If you climb onto the dryer, it may tip over and cause injury.

- Do not climb onto the appliance.
- Do not sit, lean or support yourself on the loading door or the machine.

Reaching into the rotating drum can cause injury to hands.

- Never reach into the rotating drum.
- Wait until the drum has come to a standstill.

When lifting the dryer, protruding components (e.g. loading door, cover plate) may break off.

- Do not lift the appliance by protruding components.

If a drying cycle is ended prematurely, the temperature and humidity of the laundry can cause burns on contact with the skin.

- Ensure appropriate hand protection.
- Remove the laundry quickly and spread it out so that the heat can be released.

If a puddle of water has formed on the floor near the appliance (broken hose or similar), wipe it dry and rectify the cause (see

PROBLEMS).

 **WARNING Risk of fire!**

Items containing heat-sensitive substances may ignite when drying.

- Do not dry laundry in the dryer that has been cleaned with industrial chemicals or treated with flammable solvents such as stain removers, white spirit, etc.
- Wash laundry soiled with cooking oil, acetone, alcohol, petrol, paraffin, stain remover, turpentine, wax or wax remover in warm water with an additional amount of detergent before drying.
- Do not dry textiles in the dryer that have been treated with hair remover, nail varnish remover or similar products.
- Do not dry any items in the dryer made of foam rubber (latex foam rubber), shower caps, waterproof textiles, rubberised items or items of clothing or pillows with foam rubber flakes.
- Remove all objects such as lighters and matches.
- Use fabric softener or similar products in accordance with the manufacturer's instructions.

Safety for children

WARNING Risk of injury!

Children can get into life-threatening situations or injure themselves when playing with the dryer.

- Children under the age of 3 should be kept away from the machine unless they are supervised at all times.
- Do not allow children to play in, on or near the dryer.
- Activate the child lock if required.

Children can become trapped in appliances and put their lives in danger.

Make disused appliances unusable:

- Pull out the mains plug.
- Cut the mains cable and remove together with the plug.
- Destroy the door lock.

Children can choke on small parts.

- Keep small parts away from children.

Safety during installation

Warning Risk of injury!

When placing the appliance on a plinth, it must be secured in accordance with the installation instructions, otherwise it may tip over or fall.

- Have the appliance installed by a specialist in accordance with the installation instructions.
- Do not connect an appliance with visible damage.
- When installing on top of a washing machine, the dryer must be attached using a tower kit in accordance with the installation instructions.

Observe the following when drying

The appliance may only be operated with fluff filters fitted.

- Never operate the appliance with damaged fluff filters.
- Keep the area around the dryer free of fluff.
- Clean the fluff filters regularly. The heat exchangers can be impaired and destroyed by fluff.

The maximum load is 8 kg of dry textiles.

- Only dry clean laundry in the dryer.
- Before starting a programme, ensure that there are no foreign objects in the drum.
- Keep pets away from the appliance.

A drying cycle should always end with a complete cooling step so that the laundry remains at a temperature that will not damage it.

- If a drying cycle ends prematurely without cooling down, the laundry items must be removed quickly and spread out so that the heat can be released. It should be noted that the temperature and moisture of the laundry can cause burns on contact with the skin. Appropriate hand protection must therefore be provided.

DISPOSAL

Packaging from your new appliance

All packaging materials used are environmentally friendly and reusable. Return the packaging to the specialist dealer or supplier. Dispose of the packaging material properly.

Disposing of your old appliance

Disused electrical and electronic appliances should be collected, recyclable materials recovered and harmful substances (for flammable refrigerant R 290, see safety instructions) disposed of in an environmentally friendly manner. For this reason, an advance disposal fee is levied on every household appliance and charged directly to the end user. This is required by Swiss law.

The advance recycling fee (vRG)


The advance recycling fee is already included in the price of a new appliance.

This contribution is used to finance the current disposal of old appliances. This is why all household appliances can be handed in for disposal free of charge, even if they have not been purchased new.

Your retailer or one of the 400 official SENS collection points will accept used appliances (www.sens.ch or ask your local authority).

An additional fee may be charged for the collection of appliances from households.


APPLIANCE DESCRIPTION

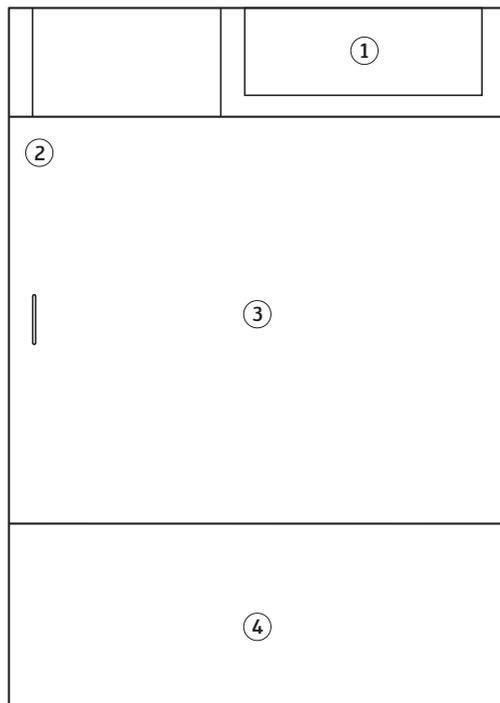

- ① Control and display panel
- ② Type plate (open appliance door, type plate is located at the top on inside of door)
- ③ Loading door
- ④ Plinth cover
- ⑤ Selection buttons

Illustration may vary depending on model.

Control and display panel

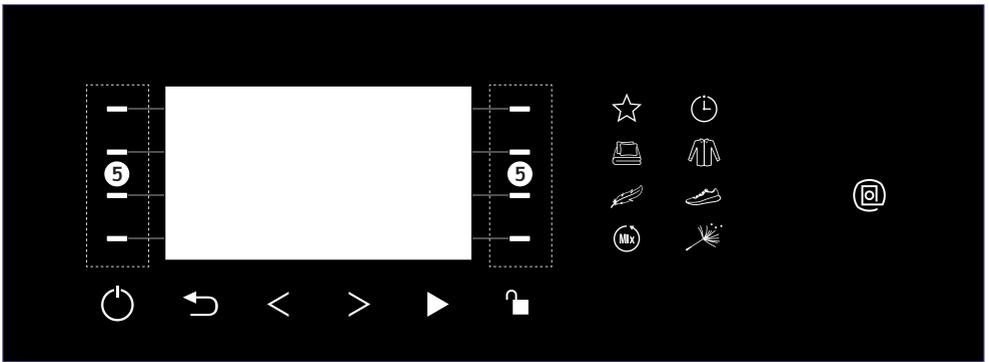

Example: Display EFH

Display and buttons

-  On / Off
-  Back
-  Scroll backwards
-  Scroll forwards
-  Start
-  Open the door
-  Standard programme
-  Settings
-  Language (temporary)/ Settings
-  1/3

Additional buttons

-  Favourites
-  Time preset
-  Homeclean
-  Businesswear
-  Softcare
-  Activewear
-  Mixclean
-  Pollenclean
-  Connectivity

Not all buttons are available for all models.

DRYING

Preparing appliance

- Check that the fluff filters have been inserted (see **DRYING / CLEANING THE FLUFF FILTERS**).
- Switch on the power supply.

Appliance switch-on

- Press **ON / OFF**. After starting up, the main menu is displayed.
- Press the **SCROLL FORWARDS** arrow button to call up additional menu pages.

Opening the door

- Press the **OPEN THE DOOR** button. The loading door springs open.
- The door can be opened manually at any time by briefly pressing at the level of the locking latch.

Selecting the programme

- Select the desired programme by pressing the light bar. The programme is displayed with programme duration, maximum load quantity and selectable options.

Selecting the programme option

The options can also be used to adjust the programme to the specifics of the laundry (see **PROGRAMME OPTIONS** chapter).


- Select the desired option(s) by pressing the light bar or the relevant symbol. Selected options are displayed in colour.
- Press again to deselect the option.

Loading laundry

- Ensure that there are no foreign objects (paper clips, coins, nails, etc.) in the drum.
- Place the laundry evenly in the drum.
- Mix large and small laundry items.

Closing the door

- Press the door shut until you hear the lock click into place and the **OPEN THE DOOR** symbol lights up.
- Ensure that no laundry items are trapped between the loading door and the fluff filter.

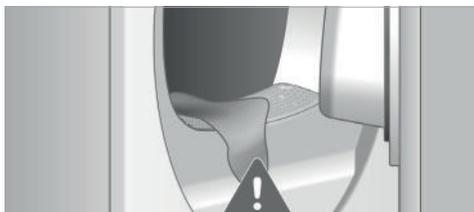

Changing programme before the programme has started

- Press the **BACK** button.
- Select the new programme with the options.

Starting the programme

- Press **START**.

Prepaid card / washMaster

For appliances with a payment system, the programme will only start after the payment has been debited (see **PREPAID CARD / WASHMASTER**).

Skipping to the next programme step

- Press and hold the light bar next to **FORWARD** until the desired programme step is displayed.

Interrupting the programme

- Press and hold the **ON/OFF** button until **PROGRAMME STOPPED** is displayed.
- Press the light bar next to **STOP** to stop the programme. Press **CONTINUE** to continue the programme.

Canceling the programme

- Press and hold the light bar next to **CANCEL** until **END** is displayed.
- Remove the laundry immediately after canceling and spread it out so that the heat can be released.

Self-cleaning

The self-cleaning function at the end of the programme helps extend the service life of the appliance and achieve good drying results over the long term.

- Avoid cancelling programmes frequently so that self-cleaning can take place.

Caution

Risk of appliance damage

- Do not open the door while **SELF-CLEANING** is displayed.

Adding laundry

- Press the **OPEN THE DOOR** button (**IS NOT LIT!**).
- The programme is stopped.
- Follow the instructions on the display.

Programme end

The programme end is displayed

When crease protection is switched on, the drum continues to rotate at short intervals at the end of the programme (see **SETTINGS / CREASE PROTECTION**). The door can be opened.

Removing laundry

- Press the **OPEN THE DOOR** button
- Remove the laundry.
- Clean the fluff filters.

Cleaning the fluff filters


Fibre abrasion (laundry fluff) is produced when the laundry is used, which is released during

drying and collects in the fluff filters in the door opening. Clogged fluff filters can impair the drying process.




- Clean filters **A** and **B** regularly.

Cleaning fluff filter A after each drying cycle

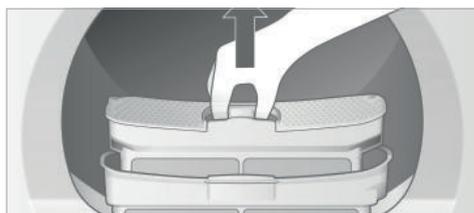

Remove inner filter **A** and flip it open.

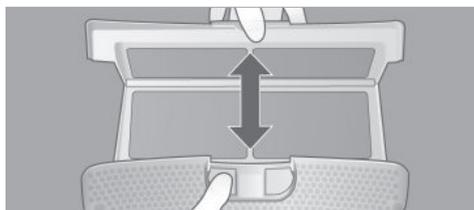


- Run your hand over the inside of the filter to remove the fluff.
- Replace the fluff filter and ensure that it is in the correct position.

Notice

Under certain circumstances, even supposedly well-cleaned fluff filters can become impermeable due to fine, invisible deposits that remain in the filter meshes.

- Pour some water onto the inner surface of the filter. If this inner surface is not permeable, clean the filter with a fine brush under running water.

Clean fluff filter B daily

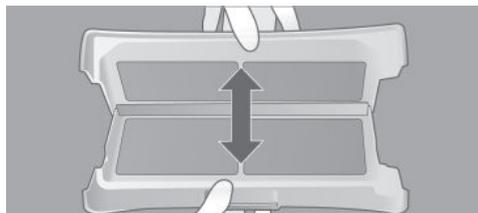

- Remove the outer, coarse filter **B** and flip it open.



- Run your hand over the inside of the filter to remove the fluff.
- Replace the fluff filter and ensure that it is in the correct position.


Descal fluff filters

If the coating cannot be brushed away, it must be dissolved with a commercially available limescale remover spray.


- Spray limescale remover onto the entire filter surface and allow it to take effect. For stubborn deposits, you can place a layer of household paper on the filter surface and spray it so that the filter is moistened. Leave the limescale remover to work overnight. Then clean the filter under running water with a fine brush.

Clean fluff filter C daily


Only for machines of the basic types MOA0.1 and MLA0.1

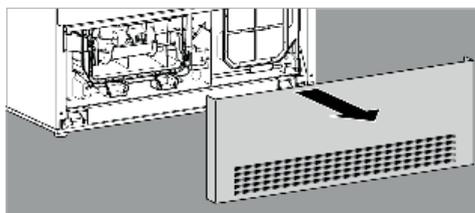


- Open the service flap.

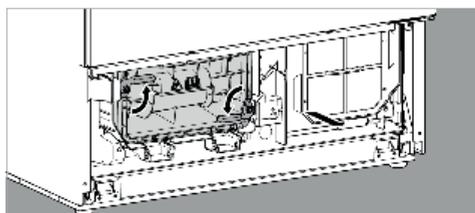

- Turn the blue locking levers towards each other in the direction of the arrow.

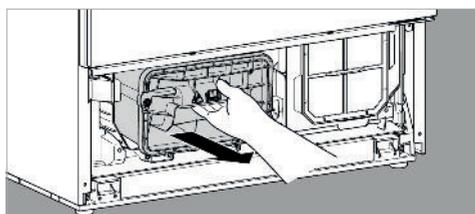

- Pull out filter **c**.

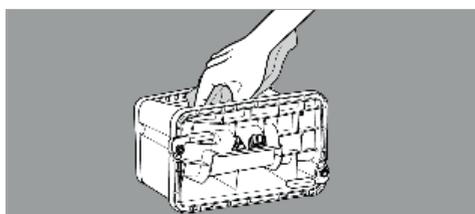


- Remove any fluff that has accumulated on the inside of the filter by hand or with a damp cloth.
- Replace the filter and lock the blue levers again.
- Close the service flap.

Notice

Never operate the dryer with damaged fluff filters!

- Fluff filters are wearing parts and can be ordered as spare parts from customer service.
- The pipes and fins behind filter C are part of the cooling circuit and must not be damaged under any circumstances.

- Replace the air filter and close the ventilation flap.

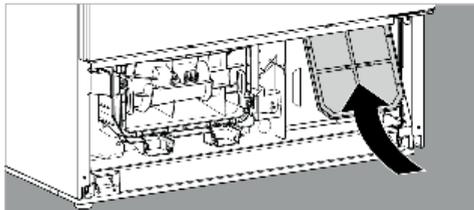


Cleaning the air filter


- Remove any fluff and dust that has accumulated on the inside of the ventilation flap by hand or with a damp cloth.

Clean air filter D once a week


- Open the ventilation flap.

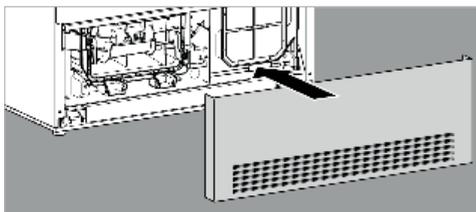

- Remove air filter D by pushing it slightly upwards and then pulling it downwards at an angle.

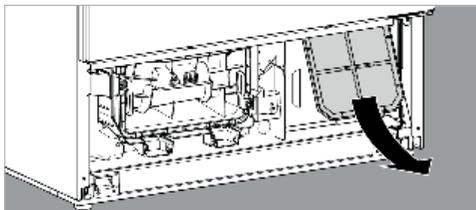

- Run your hand over the air filter to remove the fluff.

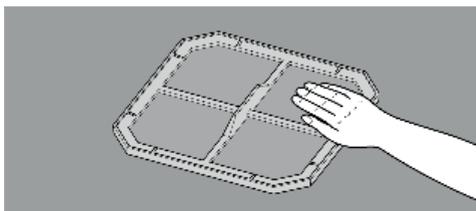

Appliance switch-off

- Press and hold the **ON/OFF** button until the display goes out.
- Disconnect the appliance completely from the power supply if it is not to be used for a long period of time.

PROGRAMME OVERVIEW

This overview contains the programmes for all appliance types. You can find the programme and consumption data for your machine on our website in the download center www.schulthess.ch/service/downloadcenter.

 Please always observe the care labelling of textiles

Most efficient programme for cotton textiles in accordance with Regulation (EU) No 932/2012

The following standard programme (indicated by ) is suitable for drying normally wet cotton textiles and is the most efficient in terms of combined energy consumption.

8.0 kg **Cotton Cabinet dry** 



Towels, tea towels and hand towels, bed linen, underwear, cotton socks
• For laundry which will not be ironed

Programme settings for testing and energy labelling in accordance with Directive 2010/30/EU

Basic Homecare programmes

8.0 kg **Cotton Iron damp**



Bed and table linen, towels, T-shirts, polo shirts, work wear
• For laundry to be ironed

8.0 kg **Cotton Slightly dry**



T-shirts, polo shirts, dresses, trousers, work wear, underwear
• For laundry which will not be ironed or only lightly ironed

8.0 kg **Cotton Cabinet dry**



Terry towels, tea towels, hand towels, bed linen, underwear, cotton socks
• For laundry which will not be ironed

8.0 kg **Cotton Extra dry**



Towelling bathrobes and bed linen (no underwear or socks)
• For particularly thick or multilayered fabrics

4.0 kg **Easy care Iron damp**



Anoraks, covers
• For laundry to be ironed

4.0 kg **Easy care Slightly dry**



Shirts, blouses, sportswear, bed and table linen, sweat suits
• For laundry which will not be ironed or only lightly ironed

4.0 kg

Easy care Cabinet dry



Trousers, dresses, skirts, shirts, blouses, corsetry, leggings, sportswear with a large proportion of synthetic fibres

- For laundry which will not be ironed

4.0 kg

Easy care Extra dry



Trousers, dresses, skirts, shirts

- For particularly thick or multilayered fabrics

8.0 kg

Time drying



For extra drying time for multilayered textiles (e.g. sleeping bags) or for drying single laundry items, such as terry towelling

- Timed drying warm (10 min – 2 h 30 min)

1.6 kg

Reconditioning



The laundry is aired without adding additional temperature

- Timed drying cold (10 min – 1 h 30 min)

Favourites

The six programmes you use most frequently, including the selected options, are saved under the star button. The **TIME PRESET** option is not saved. You can call up, select and start your favourite programmes quickly and conveniently using the star button.

You can also have your saved favourite programmes shown directly on the display when you switch on the appliance (see **SETTINGS / START MENU SELECTION**).

Homeclean

8.0 kg

Towelling Extra dry



Towelling, bath towels, bathrobes, etc., made of cotton

8.0 kg

Bed linen Cabinet dry



Sheets, fitted sheets, duvet covers, pillowcases, etc., made of cotton

- Button up duvet covers and pillowcases

2.4 kg

Down, pillows



Down textiles (e.g. jackets, coats, pillows and light blankets)

- Time drying warm (50 min – 2 h 30 min)

Businesswear

3.0 kg **Shirts, blouses Iron damp**



Shirts and blouses (max. 8 garments)

- This programme reduces creasing, is gentle to the laundry and facilitates ironing

4.0 kg **Jeans Cabinet dry**



Jeans

- Jeans are dried completely

4.0 kg **Jumpers in the basket**



Jumpers, socks and accessories made of wool
Caps, cycle helmets, stuffed animals, toys, etc.

- Time drying warm (10 min – 2 h 30 min)
- Handling, see **SPECIAL PROGRAMMES / DRYING IN THE BASKET**

Softcare

3.2 kg **Synthetics Cabinet dry**



Silk, delicates, lingerie, curtains, etc.

1.6 kg **Silk Cabinet dry**



Blouses, shirts, pyjamas

- Remove textiles immediately at the end of the programme, as silk tends to crease.

2.6 kg **Wool finish Fleece dry**



Machine washable textiles made of or containing wool
Wool mark stating «non-felting» or «machine washable»

- Remove the laundry immediately after the programme has ended and place it on a flat terry towel for drying
- The laundry becomes fluffier, but is not dried

Activewear

3.0 kg **Activewear Cabinet dry**



Sports and leisure jackets, weatherwear, ski suits

3.0 kg **Impregnating Extra dry**



Newly impregnated sports and leisure jackets, weatherwear, ski suits

- Machine drying sets the impregnant
- Dry down, ski jackets and trousers inside out

4.0 kg

Trainers in the basket



Sports shoes

- Time drying warm (10 min – 2 h 30 min)
- Handling, see **SPECIAL PROGRAMMES / DRYING IN THE BASKET**

Mixclean

4.0 kg

Mixed laundry Cabinet dry



For mixed laundry made of cotton and easy care textiles
(e.g. sportswear and terry towelling)

- Laundry that need not be ironed or need only be lightly ironed

Pollenclean

1.0 kg

Pollenclean



Shirts, blouses, skirts, trousers (max. 3 garments), curtains (individually)

- For removing pollen
- Clothing and textiles that have been worn briefly and are not soiled

SPECIAL PROGRAMMES

Press the symbol buttons to call up the menu for the relevant programme group.

Drying in the basket

Woolens should be moved as little as possible when damp, otherwise they tend to become matted. Sports shoes can damage the drum due to their weight.

Using the basket enables gentle drying without moving individual machine-washable woollen textiles, plastic or artificial leather sports shoes, caps, cycle helmets, stuffed animals, toys, etc.




Basket A

for drying shoes and accessories

Insert B

for inserting laundry items

Inserting basket

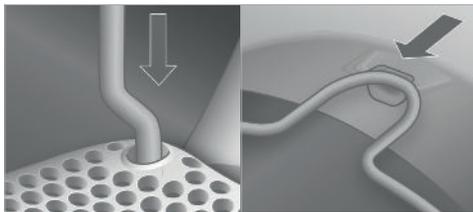


- Insert the feet of the basket into the brackets of the fluff filter.
- Lean the bar against the top.

Notice


- The drum must be empty.
- Check the basket before inserting it. Do not operate a damaged basket.

Loading laundry

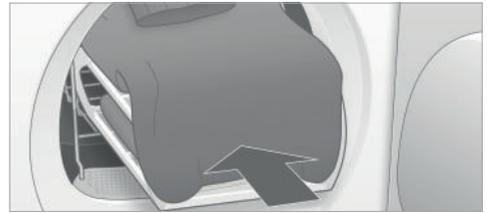


- Place the laundry loosely in the insert without squeezing it.
- The laundry must not touch the drum. Otherwise it may become jammed and damaged.

Trousers / skirts / jumpers

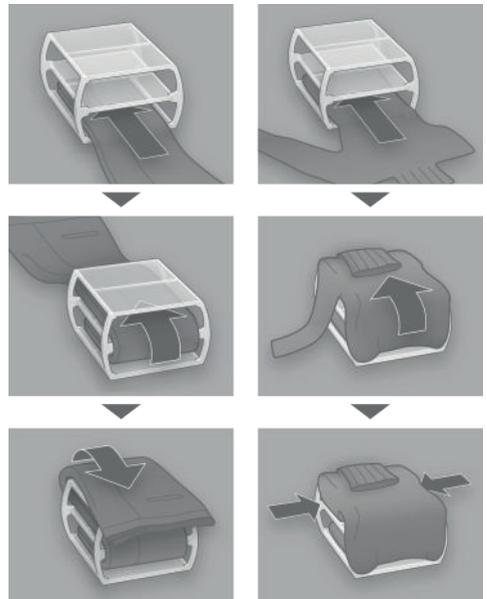

Sports shoes and accessories

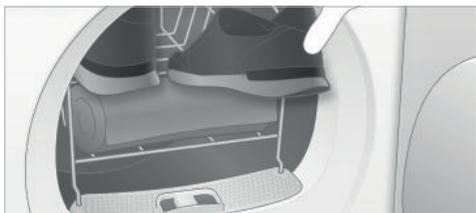

- Sports shoes and accessories (caps, cycle helmets, stuffed animals, toys, etc.) are dried without insert B.
- Pull the tongue of sports shoes far out.
- Remove shoelaces, insoles and heel cushions.
- Place a rolled-up towel in the basket in such a way that a sloping support surface is created. Place the shoes with the heel on the cloth.

Notice


- Only use the basket with the special **DRYING IN THE BASKET (PROGRAMME OVERVIEW / DRYING IN THE BASKET)** programme.

Pollenclean


This programme can be used to remove pollen from clothes and textiles that have only been worn for a short time and are not soiled.

- Use the special pollen filter instead of the fluff filter A.


Using the pollen filter

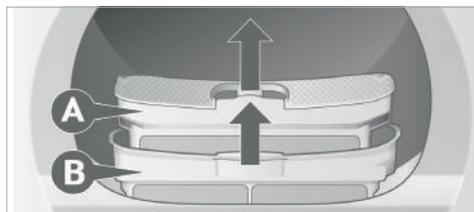


- Take out fluff filters **A** and **B**, remove filter **A** and open filter **B** (see **DRYING / CLEANING THE FLUFF FILTERS**).

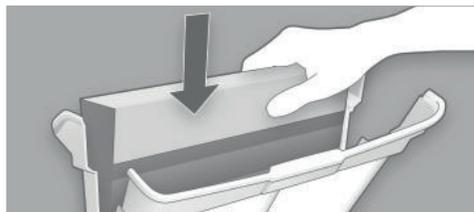


- Insert the special pollen filter into filter **B** as far as it will go.

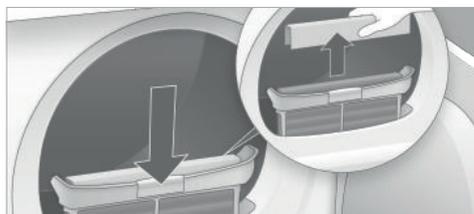

- Insert the filter combination into the dryer.
- Remove the cardboard hand guard, close the door and start the Pollenclean programme.

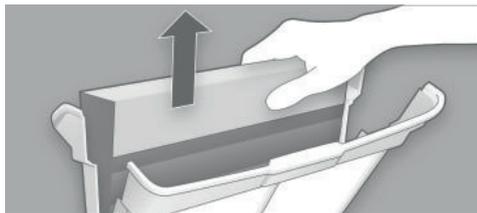

- Remove the pollen filter at the end of the programme using the cardboard hand guard.
- Replace fluff filters **A** and **B** and ensure that they are in the correct position.
- Keep the filter and cardboard hand guard in the packaging until the next use.

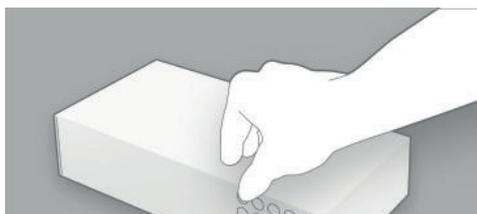

One pollen filter can be used for ten drying cycles.

- Press a reminder field on the packaging after each use.

Notice

- Only use the special pollen filter for the Pollenclean programme.
- The pollen filter is a consumable item and can be ordered from specialised dealers or from customer service.

Mixed laundry

This programme is optimised for drying mixed loads of cotton and synthetics.

PROGRAMME OPTIONS

- By selecting one or more options, a programme can be tailored to the specifics of the laundry.
- Programme options are only active for the duration of the current programme.
- Longer-term adjustments can be made in the settings (**SETTINGS MENU**) and remain active until they are changed again.

Notice

The **ANTIBAC** and **GENTLE PLUS** programme options are mutually exclusive.

Antibac

The **ANTIBAC** option extends the post-drying phase, which can largely kill bacteria.

- Only use **ANTIBAC** on textiles that are not sensitive to temperature.

Gentle plus

For gentle drying of particularly delicate textiles. The temperature is reduced.

Reverse +

By changing the direction of rotation, curling and knotting of the laundry can be avoided and an even drying result ensured.

- Select this option to dry large items of laundry, such as bed linen.

Time preset

- With the **Time preset** option, you can set the start of the programme to a later time and thus adapt it to your individual habits (e.g. to take advantage of the low tariff for night-time electricity).

Notice

Check that the time on the appliance is set correctly (see **SETTINGS / TIME**).

- First select the desired programme.
- Press the light bar next to **TIME PRESET**.
- Input the date and time for the end of the programme by pressing the light bar (15 min increments).
- Confirm input by pressing the light bar next to **OK** and press **START**.
- The preset time begins. The remaining time until the programme starts is displayed.
- Once the preset time has elapsed, the selected programme starts automatically.
- Press the Start button again to cancel the preset time and start the programme immediately.

Drying +

This option can be used to temporarily increase the degree of drying for the duration of the selected programme.

Notice

To increase the degree of drying in general (for all programmes), the **DRYNESS LEVEL RAISED** function must be activated in the settings (see **SETTINGS / DRYNESS LEVEL RAISED**).

Time

When a time-controlled programme is called up, the minimum programme duration is displayed.

- The drying time can be adjusted to the type, quantity and moisture level of the laundry.
- Increase the programme duration by pressing the light bar next to **TIME** (5 min increments).

Express

For drying reduced laundry loads or single items made of cotton, synthetic or mixed fabrics.

ECO

For the most economical drying when time is not of the essence. Energy savings: up to 10%.

SETTINGS

Your dryer has a default factory setting. You can adjust the settings to your individual requirements during initial operation or later.

The settings can only be changed if no drying programme is running.

Notice

Certain settings on your machine can be locked. However, the **LANGUAGE** (temporary), **DATE** and **TIME** functions are always available.

Settings menu

You can find the individual factory settings for your machine in the consumption data in our download center.

The settings described below are not available for every appliance.

Language temporary

A second language can be selected temporarily via the **LANGUAGE** menu.

- Tap the light bar next to the speech bubble.
The menu **LANGUAGE** is displayed.
- Select the desired language.

ADDITIONAL MENU PAGES can be opened by pressing the **ARROW BUTTONS**.

Pressing the button **BACK** in the menu ends the menu **LANGUAGE**.

Notice

This language will remain active until the machine is switched off or goes into standby.

Change settings

- Press the light bar next to the **SETTINGS** symbol. Or

- Press and hold the light bar next to the **SPEECH BUBBLE SYMBOL** until the Settings menu is displayed.
- Select **SETTINGS** by pressing the light bar.
The **SETTINGS** menu is displayed.
- Select the desired setting.
The **ARROW** buttons can be pressed to call up **ADDITIONAL MENU PAGES**.

Save changes

Press the **BACK** button (or no later than two minutes after the last input) to exit the **SETTINGS** menu.

Any changes made must be confirmed when exiting the menu.

Language

- **German**
-

The **ARROW** buttons can be pressed to call up additional menu pages.

- Select the desired language by pressing the light bar.

Date (factory-set)

The date can be set by pressing the light bar (press and hold for fast scrolling).

Confirm input by pressing the light bar next to **OK**.

Time (factory-set)

The time can be set by pressing the light bar (press and hold for fast scrolling).

Confirm input by pressing the light bar next to **OK**.

Summer/winter time

- **On**
- **Off**

The automatic changeover of the time display to summer time can be switched off.

Programme time display

- **Duration**

The remaining duration of the programme is shown on the display.

- **End**

The display shows when the programme will be finished.

Display brightness

- **50**

The intensity of the backlighting can be continuously adjusted from 20 to 100% by pressing the light bar (press and hold for fast scrolling).

Confirm input by pressing the light bar next to **OK**.

Volume signal sound

- **Off**

- **Volume 1**

- **Volume 2**

- **Volume 3**

- **Volume 4**

- **Volume 5**

The buzzer signal sound can be regulated in 5 levels or muted.

Button sound

- **On**

- **Off**

The button sound can be switched off.

Dryness level raised

- **Off**

- **+ 1**

- **+ 2**

- **+ 3**

The degree of drying can generally be increased.

This affects all programmes until the next time the setting is changed.

If the degree of drying is only to be increased for the duration of a selected programme, select the **DRYING+** option.

Child lock

- **Off**

- **On**

The child lock prevents small children from starting, changing or deleting a programme.

Input with child lock activated

- Press and **HOLD THE LIGHT BAR AT THE TOP RIGHT (IS NOT LIT!)**.

- Press the desired button at the same time.

Deleting favourites

- Select the function.

- The deletion of favourites must be confirmed.

Start menu selection

- **Standard**

- **Favourites**

You can display your saved favourite programmes directly in the start menu when you switch on the appliance.

Your favourite programmes are visible at first glance and can be selected as quickly as possible.

Crease protection

- **Off**

- **30 min**

- **6 h**

At the end of the programme, a crease protection phase (loosening up the laundry) can be set for 30 minutes or 6 hours.

Laundry spun

- **Normal**

- **Reduced**

The programme time is displayed more accurately if the dryer is adjusted to the spin speed of the washing machine (the normal value corresponds to a spin speed of 1400 rpm).

Appliance switch-off

Settings for automatic switch-off of the appliance:

- **Off**

The appliance remains switched on at all times.

- **On**

The appliance switches off when the programme has finished or if no further operations are carried out after the appliance has been switched on.

- **Standby+**

No function.

(Only for appliances with payment system)

- **Standby**

No function.

(Only for appliances with payment system)

Waking up the machine

Press the On / Off button.

Automatic door opening

- **Off**

- **On**

When the function is switched on, the door opens automatically at the end of the programme.

Factory settings

The settings can be reset to the default factory settings (delivery status).

- Confirm the reset with **YES**.

All settings are reset.

The saved favourite programmes are also deleted

PREPAID CARD / WASHMASTER CARD

Selecting the programme

- Select the desired drying programme (see **DRYING / SELECT AND START PROGRAMME**).

The display shows the selected programme with programme duration, maximum load, selected options and the relevant programme price.

Starting the programme

- Press **START** and hold the card close to the washMaster symbol on the control and display panel.

The programme price is debited and the new credit balance is displayed.

The programme starts after the payment has been made.

- Remove the card.

Credit balance insufficient

If the credit balance on the card is less than the programme price, the following message is displayed.

The difference can be paid with a second card.

Loading the card

If this message is displayed, the credit balance must be topped up before the next drying cycle.

Prepaid card

Prepaid cards cannot be topped up by the user alone.

- Please contact the caretaker or the management.

Notice

Topping up prepaid cards is described in the operating instructions for the payment system (No 538 800).

washMaster card

The washMaster card can be topped up by making a transfer into the relevant washMaster account.

Two options are available:

- Use the payment slips provided for a bank transfer.
- Top up the card via the mobile app or pay directly via the mobile app. You can find detailed instructions at: <https://help.washmaster.ch>. You must register to use the mobile app.

Scan the QR code to download the app.




CLEANING AND MAINTENANCE

Warning Risk of electric shock!

- Switch off the power supply to the machine before starting cleaning.
- Never spray the appliance with water.
- Do not use a steam cleaner.

Notice


Solvents can damage appliance parts, develop toxic vapours and are explosive. Do not use cleaning agents containing solvents.

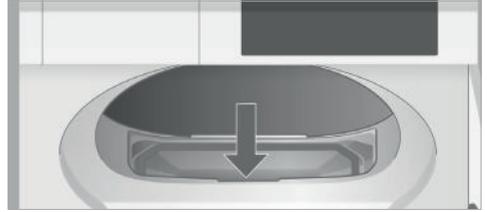

- Run the pipe of the vacuum cleaner or the brush around the well of the filter.
- Remove any residual fluff.
- Replace the fluff filters.

Cleaning the moisture sensor

After longer operation, small deposits (lime, fabric refiner) can form on the front inner side of the drum on both sides of the longish moisture sensors. With moisture controlled programmes, this can result in the desired level of dryness not being reached.

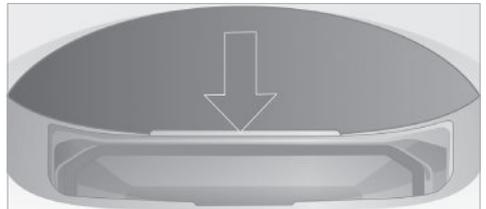

- Wipe deposits away with a cloth soaked in vinegar.

Cleaning the appliance

- Do not use abrasive cleaning agents.
- Never scratch or scrape with sharp objects.
- Clean the housing and control panel with soapy water or a solvent-free, non-abrasive cleaning agent.

Notice


- Never use steel wool!

Cleaning the fluff filters

See **DRYING / CLEANING THE FLUFF FILTERS**.

Cleaning the filter holder

From time to time it is necessary to remove any fluff that has accumulated inside the filter holder. To do so, use a vacuum cleaner or a cleaning brush.

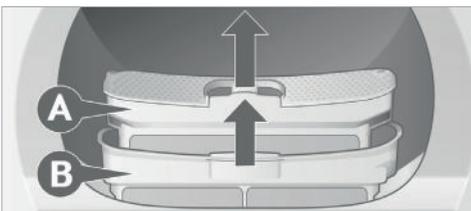

- Pull both filters out of the filter holder.

Emptying for frost protection or transport

If the dryer is in a room susceptible to frost or is to be transported, it must be completely emptied.

- Start any programme.
- Press the light bar next to **FORWARD** repeatedly until **SELF-CLEANING** is displayed.
- Allow the programme to finish (without crease protection).

Self-cleaning

The dryer is equipped with an automatic self-cleaning function.

At the end of each programme and also during the drying process, if necessary, the heat exchanger is cleaned.

A slight knocking noise can be heard during the cleaning process and the self-cleaning symbol is displayed.

Carry out self-cleaning manually

If you use the appliance rarely or only dry small amounts of washing, it is recommended that manual self-cleaning be carried out from time to time:

- Pull the fluff filters **A** and **B** out of the filter holder (see **CLEANING AND MAINTENANCE / CLEANING THE FILTER HOLDER**).
- Pour 1.5 l tap water into the opening of the filter holder.
- Replace the fluff filters.
- Start the **COTTON CABINET DRY** programme.
- Press the **FORWARD** light bar several times until **SELF-CLEANING** appears in the display.
- Allow the programme to finish (without crease protection).

PROBLEMS

Warning

Improper repairs can result in serious accidents, damage and operation malfunctions!

Do not make any changes, manipulations or attempt repairs using tools such as screwdrivers, etc.

ERROR MESSAGES

Child lock active

- Hold the bar in the upper right (**is not lit!**) and at the same time press the desired button.

Check drain

- Condensate water pump is not running.
- Check if the water discharge hose is bent or the on-site water discharge is clogged. After rectifying the error, the programme can be continued from the point at which it was interrupted.
 - Press the light bar next to **CONTINUE**.

Close door

- The start button has been operated before the door has been closed.
- Close the door and press **START**.

Clean the fluff filters

Display while programme is running

- Press button **OPEN THE DOOR**. The loading door springs open.
- Clean the fluff filters (see **DRYING / CLEANING THE FLUFF FILTERS**).
- Close the door and press the light bar next to **CONTINUE**.

Display after the programme ends

- Acknowledge the error message by pressing the light bar next to **OK**.
- Clean the fluff filters (see **DRYING / CLEANING THE FLUFF FILTERS**).
- If the error message is displayed again, contact customer service.

Clean filter «C»

- Clean the fluff filter **C** behind the service flap (see **DRYING / CLEANING THE FLUFF FILTERS**).
- Close the service flap and press the light bar next to **OK**.

Insert filter «C»

Display at the start

- Ensure the fluff filter **c** is placed correctly behind the service flap.
- Press **START**.

Display while programme is running

- Ensure the fluff filter **C** is placed correctly behind the service flap.
- Press the light bar next to **CONTINUE**.

Error door lock

- Wait for the programme to end.
- Press again button **OPEN THE DOOR**.
- If the door cannot be opened after the programme has ended, contact customer service.

Programme stopped

- Button **ON/OFF** was pressed during a running programme.
- Press the light bar next to **CONTINUE**.

ERROR MESSAGES
PREPAID CARD / WASHMASTER CARD

Turn card	<ul style="list-style-type: none">• Turn the card over.
Not enough balance	There is not enough credit on the card.
Insert different user card	<ul style="list-style-type: none">• Use a card which has credit
Wrong user number or card type	This card is not valid. <ul style="list-style-type: none">• Please contact the person in charge.
Cannot read card	This card cannot be read. <ul style="list-style-type: none">• Try inserting the card again or contact the person in charge.
Wrong laundry room number	This user card is not valid for this laundry room.
Please insert the card again	The card could not be read. <ul style="list-style-type: none">• Please insert the card again
Card balance almost used up	The credit on this card is sufficient only for the drying programme you have selected.

MACHINE OPERATION

Machine does not start when pressing the On/Off button

- Check whether the mains power is switched on (wall / plug).
- Check whether all the fuses are intact or the safety switch has tripped.

Mains blocking (usually at noon).

- Operate the appliance after the mains blocking has ended.

- If the dryer does not start despite correct power supply, contact customer service.

The dryer does not start

- Press button **START**.
- If the programme does not start despite pressing the start button, contact customer service.

Notice

When time preset is activated, the programme starts only at the pre-selected time.

The drying target was not achieved

When warm, laundry feels moister than it actually is.

- Remove the laundry from the dryer and let it cool.

When still moist:

- Clean the fluff filters (see **DRYING / CLEANING THE FLUFF FILTERS**).
- Increase degree of drying (see **SETTINGS / DRYNESS LEVEL RAISED**).
- Clean the moisture sensor (see **CLEANING AND MAINTENANCE / CLEANING THE MOISTURE SENSOR**).

The individual laundry piece does not reach the set drying target

- If one single piece is to be dried in the dryer, it will be dried more evenly by adding additional pieces, e.g. two terry towels or using the **EXPRESS** programme option.

The drying takes too long

The fluff filters are clogged with fluff or limescale.

- Clean the fluff filter (see **DRYING / CLEANING THE FLUFF FILTERS**).

Power failure.

- Note lock times of EW.

The laundry is not dry after the maximum possible settings

Drum is overloaded.

- Observe the maximum loads in the programme table.

Insufficient room ventilation.

- Open a window or door.

The fluff filters are blocked with fluff or lime deposits.

- Clean the fluff filters (see **DRYING / CLEANING THE FLUFF FILTERS**).

Laundry gets tangled

- Select the special programme «Bed linen» or «Terry towels»..
- Use the **REVERSE +** programme option.

Drum lighting does not work

The LED is defective.

For safety reasons the LED must only be replaced by a qualified specialist.

Dampness in the room increases significantly

The room does not have sufficient ventilation.

- Ensure adequate ventilation.

Water on the floor	<ul style="list-style-type: none">• Check the drain hose for leakage and proper installation.
Odour accumulation	If the appliance is used only rarely or only for small amounts of washing (e.g. in a holiday apartment), fluff can collect in the drainage system (see CLEANING AND MAINTENANCE / SELF-CLEANING).

ERROR MESSAGES F---

«Error F --» is displayed	<ul style="list-style-type: none">• Acknowledge the error message by pressing the light bar next to OK. Machine restarts.• Select a programme again and press button START.
«Error F --» is displayed again despite programme restart	<ul style="list-style-type: none">• Acknowledge the error message by pressing the light bar next to OK.• Interrupt the power supply for one minute (switch the main switch off and on again). As soon as the display lights up, the appliance is again ready to operate.• Select a programme again and press button START.
«Error F --» is displayed again after interruption of the power supply	<ul style="list-style-type: none">• Note the error message.• Switch off the power supply.• Contact customer service (see CUSTOMER SERVICE).

CUSTOMER SERVICE

Schulthess Maschinen AG produces washing machines and dryers of outstanding quality with a proverbially long service life. It is for this reason that Schulthess carefully selects, tests and assembles parts, components and materials.

Should error messages or faults nevertheless occur, you will find lots of helpful information online at www.schulthess.ch/de/kundenservice, such as detailed operating instructions, tips and tricks as well as answers to the most frequently asked questions (FAQ).

Our service number 0844 888 222 can be contacted from Monday to Friday, 08:00 to 12:00 and 13:00 to 17:00.

Please make a note of error message F -- as well as the product and appliance number.

Register your appliance or take advantage of the extended warranty, which offers you many benefits. You can also find the relevant information at **www.schulthess.ch/de/kundenservice**.



For environmental reasons, we now only print very little.
Further documents and information on your machines
can be found in the download centre or in the informa-
tion area of your machines at
www.schulthess.ch/en (see QR code).

Schulthess Maschinen AG
Alte Steinhäuserstrasse 1, 6330 Cham ZG
Phone + 41 (0) 55 253 51 11
www.schulthess.ch

